[331_{v3}] Gerflor Silence Plus 19 dB

CONDITIONS

SUBSTRATES

ACCESSORIES


INSTALLATION

LAYING CONDITIONS


AUTHORIZED FLOOR COVERINGS		Creation 30-40-55 Solid Clic, Senso Clic, Senso Clic Premium, Rigid 30 Lock, Senso 20 Lock, Lock+, depending on the type of premises (see installation guidelines of the floor covering).
SUBSTRATE EVENNESS	Flatness requirement: < 5 mm / 2 metre ruler and < 1 mm / 20 cm ruler	Flat, clean, sound, dry and solid substrate.
STORAGE	At least 24 hours prior to installation	Unfold the underlayer in the room where it is going to be laid.
LAYING TEMPERATURE	Refer to installation guidelines of the associated floor covering	Ideally 20°C.
PERIMETER EXPANSION GAP	Refer to installation guidelines of the associated floor covering	Around the edges of the room, fixed objects and door frames. The gap must be covered by a finishing profile.
DIVISIONS	Refer to installation guidelines of the associated floor covering	Each closed room or premises must be considered separately.
DIRECT SUNLIGHT (SUNNY AREAS, BAY WINDOWS, SKYLIGHTS, SKYDOMES, ETC.)	Refer to installation guidelines of the associated floor covering	
VERANDA/CONSERVATORY	Prohibited	Prohibited, irrespective of the substrate.
FIRST USE	Immediately after installation	

USAGE CONDITIONS


USAGE TEMPERATURE	Refer to installation guidelines of the associated floor covering	
STATIC LOADS	< 30 kg/cm² and < 200 kg/support	Do not use rubber end caps. Use flat (not tapered) end caps without any pattern that are suitable for PVC. Use end caps on furniture legs.
CASTOR CHAIRS	PVC-compatible castors according to EN 12529	Recommendation: protective mat beneath castor chairs.

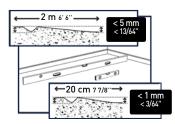

SUBSTRATE EVENNESS



STORAGE AND PERIMETER EXPANSION GAP



FLOOR COVERING INSTALLATION



[331_{v3}] Gerflor Silence Plus 19 dB

CONDITIONS

SUBSTRATES

ACCESSORIES

INSTALLATION

SUBSTRATE

CONDITIONS

For installing this floor covering

Concrete floor, painted concrete, levelling compound, cement based screed, anhydrite (calcium sulphate)-based screed	Moisture content: Cement based substrate: < 7 % CCM, 92 % RH - Anhydrite-based substrate: < 1 % If necessary, prepare the support and apply a smoothing compound to eliminate any irregularities	
Ceramic tiles	Check the joint width and depth allowed in the Installation Guidelines of the associated flooring. If the width and depth are greater, apply a grouting or levelling compound.	
Glued compact PVC / rubber / linoleum floor coverings	After examination and repair depending on the condition of the floor covering. If more than 10% is in bad condition, complete removal is necessary followed by new substrate preparation	
Foam backed PVC floor coverings	Prohibited	
Textile floor covering (carpet) / textile-backing PVC floorings	Prohibited	
Vinyl asbestos tiles	Refer to Gerflor's Technical Guide for Overlaying Asbestos Floors	
Glued parquet / laminated floor /floating parquet or wood based panels	Prohibited	
OSB	Apply a fiber-reinforced levelling compound after treatment of any unevenness and joints between panels	
Wood-based panel flooring on joists or battens / parquet nailed on battens ventilated underneath	After treatment of any possible defects on the substrate (unevenness, open joints between planks or panels).	
Water reversible underfloor heating	Prohibited	
Underfloor heating with circulating water, max temperature 28°C	Allowed	
Radiant electric underfloor heating	Prohibited	

The preparation of the substrate must comply with the current relevant standards in the country of use. For any information on product properties and usages, please refer to its technical datasheet: www.gerflor.com.



[331_{v3}] Gerflor Silence Plus 19 dB _____

	SUBSTRATES	ACCESSORIES	INSTALLATION
TOOLS	Cutter - Tape measure - Metal ruler		
DIVISIONS	FIX&FREE 100 and ROMUS accessories	5	
JOINING OF UNDERLAYER STRIPS	Single-sided adhesive/masking tape wi	th a thickness <0.2 mm.	
FINISHES	Skirting Design - Ref. : 6086 / Skirting D	Design - MDF - Ref. : 5947 – See Installatio	on Guidelines [504A] and [504B]



[331₁₃] Gerflor Silence Plus 19 dB

CONDITIONS

SUBSTRATES

ACCESSORIES |


INSTALLATION




The floor covering should be examined prior to installation for any visible defects. The flooring must belong to the same production batch. If there are any visible defects, please notify GERFLOR and do not begin installation without its prior approval.


LAYING FLAT

• Unfold the underlayer the day before installation with the printed side facing upwards and position it in the same laying direction as the planks/tiles.




- Stretch and flatten the underlay by hand to remove any folds and bumps.
- Perimeter expansion gap: at room edges, fixed objects and door threshold. The gap must be covered by a finishing profile. Refer to installation guidelines of the associated floor covering.





- Position the underlayer strips edge to edge.
- If necessary, divide the laying (see installation guidelines of the associated floor covering).
- Join the underlay strips and the end-to-end joints with single-sided adhesive tape/masking tape with a thickness <0.2 mm.





[331_{v3}] Gerflor Silence Plus 19 dB

CONDITIONS


SUBSTRATES

ACCESSORIES

INSTALLATION

INSTALLATION AND CUTTING OUT

- Cut the underlayer along the walls or existing skirtings. Leave a perimeter expansion gap suitable for the associated floor covering (see installation guidelines of the floor covering).
- Tiles/planks must be laid in the same direction as the underlayer. Avoid laying underlay joints and plank/tile joints side-by-side.



- Install tiles/planks in compliance with the associated installation guidelines.
- In case of division, the division of the planks/tiles must match that of the underlayer.

